


CHAPTER 18

Virtual Private Network Connection Management

18.1 Initiate a VPN connection

Once the VPN configuration is completed, any traffic from local LAN to remote LAN will trigger the VPN connection. Or you can use VPN Connection Management in System Management to direct "Dial" or connect a VPN from dial-out router. Once the link is up the VPN connection status/information will also show in VPN Connection Management page. A "Drop" button will let you to disconnect the link.

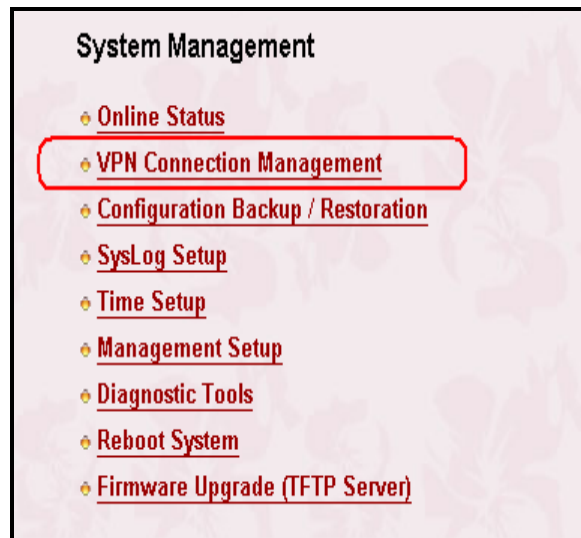

VPN Connection Management

Dial-out Tool

Refresh Seconds : 10 Refresh

(L2TP) 172.16.2.33
▼

Dial

VPN Connection Status
Next

VPN	Type	Remote IP	Virtual Network	Tx Pkts	Tx Rate	Rx Pkts	Rx Rate	UpTime	
1 (Vigor 1)	IPSec Tunnel AH-MD5 Auth	172.16.2.26	192.168.2.0/24	13	3	39	3	0 : 4 : 10	Drop
2 (Vigor 2)	IPSec Tunnel 3DES-MD5 Auth	172.16.2.29	192.168.3.0/24	4	3	45	3	0 : 2 : 58	Drop
3 (L2TPIPsec)	L2TP 3DES-MD5 Auth	172.16.2.37	192.168.6.0/24	0	0	4	3	0 : 2 : 37	Drop
4 (to Win2k)	PPTP/MPPE	172.16.2.32	192.168.4.0/24	0	0	0	0	0 : 1 : 5	Drop
5 (L2TP)	L2TP	172.16.2.33	192.168.5.0/24	0	0	17	170	0 : 0 : 10	Drop